

we're all about water!

ArcticStar 55

Mains Fed · Floor-standing · Chilled · Hot · Filtered



Eco Sensor saves up to 33% in electricity

trial it, love it, keep it!

Request your no obligation 10 day trial Call 01392 877 172 Email hello@thirstywork.com www.thirstywork.com/free-trial





hydrateconsciously! We're committed to reducing plastic waste

Floor-standing ArcticStar 55

Mains fed, hot and cold water dispenser





Optional: 10L internal waste tank

KEY FEATURES

- Hot and cold water dispense
- Designed for reliability, longevity and easy maintenance
- Sturdy and reliable water dispenser with manual push down taps, dispensing cold and hot water
- Safety lock on hot tap
- Hot water booster raises hot water temperature to a max of 95°C
- Un-boosted hot water temperature is up to 90°C
- ECO light sensor saves up to 33% in electricity costs
- Delivers 5 litres per hour of chilled water below 10°C
- 2 litre hot tank
- Full filter change and servicing package included
- With pura filtration
- Optional puraguard
 Antibacterial and antiviral protection

COLOUR OPTIONS



Anthracite

WATER OPTIONS







Chilled F

Hot

Filtered

INSTALLATION OPTIONS



Floor-standing Unit The ArcticStar 55 floor standing mains fed water dispenser is designed for simplicity and robustness, with manual taps to easily dispense water at the desired temperature. The in-built Eco Sensor turns the boiler off when the office lights are switched off, saving up to 33% in electricity.

DIMENSIONS

Height:	1135mm
Width:	340mm
Depth:	340mm
Dispense height:	170mm

FULL SPECIFICATION ArcticStar 55 Floor-standing Model

Max power consumption	220-240V / 50hz
Throughput litres per hour	5L/h of chilled water below 10°C
Dimensions	340mm (W) x 340mm (D) x 1135mm (H)
	Dispense height: 170mm
Weight	18kg

OPERATION

Green light:

Power ON

Pulsing orange light

Indicates heating to standard 92°C

Solid orange light

Standard temperature range of 92°C / 82°C

Pulsing red light

Boosting to 95°C/96°C

Solid red light

1.5 ltr of boosted hot water of 96° C / 90° C

Hot water booster

The hot water booster is located on the right hand side of the dispenser. Keep finger on booster icon until you hear second beep. Orange or red light will change to pulsing red. Once pulsing stops, lights will show red

In case the ArcticStar 55 is located in a dark area, it may be necessary to disable the ECO function by switching it OFF on the back of the Cooler

AVAILABLE ACCESSORIES



Plumbable Drip Tray

Connect the drip tray to mains drainage



Waste Tank

10 litre internal waste system, fitted with an alarm to signal when the tank is full



Paper Cups

- 7oz recyclable paper cups
- 7oz biodegradable and compostable paper cups
- 4oz paper cones



Puraguard

Antibacterial and Antiviral Surface Protection Coating

